

HP58C3BK

REFILL INSTRUCTIONS

For HP® C6658AN PHOTO

Contents:

Your kit should contain the following:

2oz photo black ink, 2oz photo cyan ink, 2oz photo magenta ink, 1 10cc ink injector, 2 poly wipes, needle, rubber gloves, instructions.

If any of these items are missing please call us for a replacement item or kit.



STEP 1

Set the cartridge to be filled on some newspaper in case of any ink spillage. Remove the label on the top of the cartridge. You will find 5 holes. You will be injecting the ink in the holes pictured above where it says photo black, photo magenta and photo cyan. Make sure you get the ink in the proper chambers or you will ruin the cartridge.

STEP 2

Attach the needle to the injector/syringe and draw 6cc of color ink. Dispense it **SLOWLY** into the proper hole in the top of the cartridge. Use the picture above as a guide or insert a unused toothpick in the hole and observe the color. Get the tip of the needle to the bottom of the cartridge. Repeat this for all 3 colors. If ink starts dripping from the bottom or comes out the top, stop immediately. All colors may not be completely empty. Wipe any ink from the top to avoid cross chamber contamination. To avoid this problem put tape over the other holes while refilling.

STEP 3

It is not necessary to reseal the holes. Let the cartridge sit on a paper towel for about an hour to ensure there are no drips. It's actually best to let it sit over night.

TROUBLE SHOOTING

PRINTS IN STREAKS / MISSING LINES : Perform print head clean procedure as described in the owners manual.

CARTRIDGE LEAKS: Cartridge is overfilled. Use the injector to remove some of the ink.

ATLASCOPY.COM
P.O. Box 1292
Dover, DE 19904
<http://atlascopy.com>