



KCE10C3B
REFILL INSTRUCTIONS
For Epson® T017201, T018201

Contents:

Your kit should contain the following:

KCE10 ChipResetter

4 - 2oz bottle of ink, 1 10cc ink injector, 2 polly wipes, 12 yellow seals, needle, drill tool, instructions.

If any of these items are missing please call us for a replacement item or kit.

STEP 1

Expand vent holes with the drill tool provided in the kit, Using the yellow seals cover the exit hole to avoid leakage. Attach the needle to the syringe and draw the proper color and amount of ink into it. Each Color chamber will hold 8cc/ml The Black cartridge will hold 15cc/ml. Place the cartridge to be filled on a paper towel in case of spillage.

STEP 2

Insert the needle into one of the vent hole drilled and slowly inject the ink and at the same time lift up slightly to expose the ink to different parts of the internal sponge inside the cartridge. Stop filling if the ink comes out of the fill hole. The cartridge may or may not take all of the ink, depending on how empty it was. If the cartridge is to be used soon after refilling do not cover the vent holes with tape, as these are vents and need to be open in order for the cartridge to work.

IMPORTANT

Care should be used in filling these cartridges since the print head is internal and made to be permanent, which makes it susceptible to small particles clogging it over time. Both have an internal sponge for ink retention. Use the yellow round sealing dots to cover the ink exit holes to avoid leaking when refilling. Remove the seals before installing the cartridge back into your printer. For long term storage, cover the top openings with tape to prevent the cartridge from drying out.



T018201 Shown Here



T017201 Shown Here

ATLASCOPY.COM
P.O. Box 1292
Dover, DE 19904
HTTP://ATLASCOPY.COM