

**CA05C3**  
**REFILL INSTRUCTIONS**  
**For Canon® BC-05 COLOR**

**Contents:**

Your kit should contain the following:

3 - 2oz bottles of ink, 1 10cc syringe, 1 blunt needle, 3 cotton wipes, 1 drill tool, instructions.

If any of these items are missing please call us for a replacement item or kit.



**PLEASE WORK ON NEWSPAPER IN CASE OF SPILLAGE**

1) Be careful not to overfill the cartridge which can result in cross chamber contamination. Please read the instructions completely before proceeding.

2) Remove the BC-05 cartridge from your printer. Please do NOT touch the printhead as this may cause permanent damage to the cartridge.

3) Locate the three vent holes on the cartridge as illustrated in figure 1. Use the drill tool provided to drill through the vent hole of the plug associated with the color ink you want to refill. Drill all the way through the plug and by slightly bending the tool pull out the plug. See figure 2. Save the plug.

4) Attach the needle to the syringe and draw 5cc of ink from the bottle. Insert the needle into the hole where you removed the plug. Make sure you are injecting the correct color into the vent hole. Refer to figure 1.

5) Re-insert the plug (removed in step 3) into the vent hole. Install the cartridge into your printer and run the printers head cleaning routine a few times.



figure 1

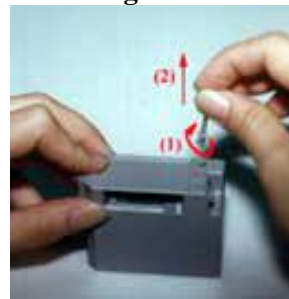


figure 2

ATLASCOPY.COM  
P.O. Box 1292  
Dover, DE. 19904

[HTTP://ATLASCOPY.COM](http://atlascopy.com)