

CA201C3
REFILL INSTRUCTIONS
For Canon® BJI-201 COLOR

Contents:

Your kit should contain the following:
3 - 2oz bottles of ink, 1 10cc syringe, 1 blunt needle, 3 cotton
wipes, 1 drill tool, 12 round yellow seals, instructions.
If any of these items are missing please call us for a
replacement item or kit.



PLEASE WORK ON NEWSPAPER IN CASE OF SPILLAGE

1) Lay the cartridge down on a flat surface with the tab facing to the right and the foam within the cartridge should be to the left. (figure 1)

2) Peel back the label. Locate the upper left corner of the empty liquid side of the cartridge (not the foam side).

3) Using the drill tool, drill a hole in the upper left of the empty liquid side of the cartridge (figure 2). Drill through the plastic by twisting the drill tool clockwise. Do NOT drill all the way through the other side of the cartridge. Remove the drill by continuing to drill in a clockwise rotation. This helps to keep plastic chips out of the interior of the cartridge.

4) Install the needle on the syringe and draw 9cc of ink from the bottle. Hold the cartridge so that the fill hole you just made is lower than the sponge. Keep the sponge up or the cartridge will leak while you are filling it. Slowly inject enough ink in the fill hole until the cavity is filled. Seal the hole with a round yellow seal and fold the label back down.

5) Re-install the cartridge and run the printers head cleaning routine.

6) Repeat this procedure for the remaining two colors if needed.

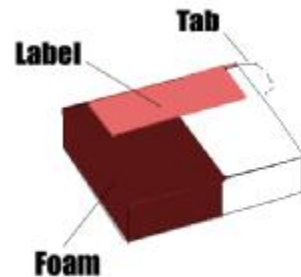


figure 1

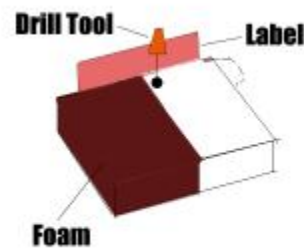


figure 2